



NAÇÃO
FLUENTE

Inglês Técnico

Engenharia Elétrica



Sumário

<input type="checkbox"/> Introdução	3
<input type="checkbox"/> Orientação	4
<input type="checkbox"/> Expressões	5
<input type="checkbox"/> Glossário	8
<input type="checkbox"/> A	8
<input type="checkbox"/> B	9
<input type="checkbox"/> C	10
<input type="checkbox"/> D	12
<input type="checkbox"/> E	14
<input type="checkbox"/> F	15
<input type="checkbox"/> G	16
<input type="checkbox"/> H	17
<input type="checkbox"/> I	17
<input type="checkbox"/> J	18
<input type="checkbox"/> K	18
<input type="checkbox"/> L	19
<input type="checkbox"/> M	20
<input type="checkbox"/> N	21
<input type="checkbox"/> O	22
<input type="checkbox"/> P	22
<input type="checkbox"/> Q	23
<input type="checkbox"/> R	23
<input type="checkbox"/> S	24
<input type="checkbox"/> T	26
<input type="checkbox"/> U	26
<input type="checkbox"/> V	26
<input type="checkbox"/> Z	28
<input type="checkbox"/> Inglês Corporativo	29
<input type="checkbox"/> Fluência Descomplicada	30
<input type="checkbox"/> Compartilhe	31

Introdução

Vocabulário e expressões essenciais para Engenharia Elétrica

Bem-vindo à nossa apostila de inglês técnico para Engenharia Elétrica!

Neste material, exploraremos os termos e expressões essenciais necessários para uma comunicação eficaz no campo da engenharia elétrica.

Você desenvolverá habilidades para articular conceitos e técnicas elétricas de forma clara e precisa, enquanto adquire a capacidade de compreender e responder de maneira eficaz aos desafios e demandas desta área.

Estamos entusiasmados para iniciar esta jornada de aprendizado com você, contribuindo para o seu sucesso profissional como Engenheiro Elétrico!

Vamos começar!

Orientação

Siga estas orientações para otimizar o uso deste material e potencializar o seu aprendizado

- 1 Imprima este PDF;
- 2 Destaque com caneta marca-texto as palavras desconhecidas;
- 3 Leia a coluna *meaning* para descobrir o significado, sem usar tradutores;
- 4 Construa frases com aplicação das novas palavras que você está aprendendo.

Se precisar de inspiração, use o dictionary.cambridge.org/

Faça isso por meio da escrita e não da digitação, pois isso potencializa o armazenamento do novo conhecimento na memória de longo prazo.

Expressões

Exemplos

<p>Active component Componente ativo</p>	<p>An active component is required to change the amplitude of a signal between input and output. É necessário um componente ativo para alterar a amplitude de um sinal entre entrada e saída.</p>
<p>Anode Ânodo</p>	<p>A red wire is often attached to the anode. Um fio vermelho é geralmente conectado ao ânodo.</p>
<p>Capacitance Capacitância</p>	<p>We monitor any change in the voltage, resistance, or capacitance anywhere on the line. Monitoramos qualquer alteração na tensão, resistência ou capacitância em qualquer lugar da linha.</p>
<p>Capacitor Capacitor</p>	<p>Those capacitors were of a different design and a different manufacturer. Esses capacitores tinham um design diferente e eram de fabricante diferente.</p>
<p>Circuit breaker Disjuntor</p>	<p>Always use a circuit breaker for added safety. Sempre use um disjuntor para aumentar a segurança.</p>
<p>Dielectric constant Constante Dielétrica</p>	<p>Density fluctuations or changes in the dielectric constant do not influence the function. Flutuações de densidade ou mudanças na constante dielétrica não influenciam a função.</p>
<p>Direct current Corrente contínua</p>	<p>Only devices built for use with direct current can be operated in this system. Somente dispositivos construídos para uso com corrente contínua podem ser operados neste sistema.</p>
<p>Electric charge Carga elétrica</p>	<p>If you rub two materials together you may get an electric charge. Se você esfregar dois materiais, você pode gerar uma carga elétrica.</p>
<p>Electric field Campo elétrico</p>	<p>An electric field will exist even when there is no current flowing. Um campo elétrico existe mesmo quando não há corrente elétrica.</p>
<p>Electrostatic discharge Descarga eletrostática</p>	<p>Improper grounding can cause electrostatic discharge. O aterramento inadequado poderá causar descarga eletrostática.</p>

Expressões

Exemplos

Generator Gerador	This is why the generator and battery need to be extremely effective. É por isso que o gerador e a bateria têm que ser extremamente eficazes.
Impedance Impedância	This basic network is able to act as an impedance transformer. Essa rede básica é capaz de atuar como um transformador de impedância.
Load Impedance Impedância de carga	Todos os elementos do sistema devem ter a mesma impedância de carga. All elements of the system must have the same load impedance.
Negative charge Carga Negativa	Oxygen, necessary for human life, carries a negative charge. O oxigênio, necessário para a vida humana, carrega uma carga negativa.
Oscilloscope Osciloscópio	They area a professional oscilloscope supplier based in China. Eles são fornecedores profissionais de osciloscópios baseados na China.
Passive component Componente Passivo	If the surface is burned, it means this passive component is malfunctioning or in bad quality. Se a superfície estiver queimada, significa que esse componente passivo está com defeito ou é de má qualidade.
Positive feedback Retorno positivo	This positive feedback mechanism would act to maintain the direction of flow. Esse mecanismo de retorno positivo atuaria para manter a direção do fluxo.
Potentiometer Potenciômetro	For all the employees: Don't blindly turn this potentiometer. Aviso a todos os funcionários: não gire cegamente este potenciômetro.
Power supply Fonte de energia	Uninterrupted power supply is a vital support for the modern way of life. Uma fonte de energia ininterrupta é um suporte vital para o estilo de vida moderno.
Relay Relé	Set a time period for the relay to wait after reaching the setpoint. Estabeleça um período de tempo para que o relé espere após atingir o ponto de ajuste.

Expressões

Exemplos

<p>Resistor Resistor</p>	<p>This circuit consists, usually, of only resistors and capacitors. Este circuito consiste, geralmente, apenas de resistores e capacitores.</p>
<p>Semiconductor Semicondutor</p>	<p>The material is a kind of semiconductor paint, filled by billions of nano cells able to capture solar energy. O material é um tipo de tinta semicondutora, preenchida por bilhões de nano células capazes de captar energia solar.</p>
<p>Surge protector Filtro de linha</p>	<p>I wonder if a surge protector would protect equipment within the facility. Gostaria de saber se um filtro de linha protegeria o equipamento dentro da fábrica.</p>
<p>Switch Interruptor</p>	<p>Now flip the switch and turn the machine off. Agora acione o interruptor e desligue a máquina.</p>
<p>Transistor Transistor</p>	<p>When the transistor blew, we were no longer able to regulate the current. Quando o transistor queimou, não conseguimos mais regular a corrente.</p>

Glossário

A

Acceptor atoms	Trivalent atoms that accept free electrons from pentavalent atoms.
AC coupling	Circuit that passes an AC signal while blocking a DC voltage.
AC load line	A graph representing all possible combinations of AC output voltage and current for an amplifier.
Active component	A component that changes the amplitude of a signal between input and output.
Active filter	A filter that uses an amplifier in addition to reactive components to pass or reject selected frequencies.
Active region	The region of BJT operation between saturation and cutoff used for linear amplification.
ADC	Abbreviation for Analog to Digital Converter.
Aliased signals	A signal (normally electrical) sampled below the Nyquist Rate (twice the maximum frequency content of the signal) so that the frequency content of signal is erroneously rearranged.
Alpha	Ratio of collector current to emitter current in a bipolar junction transistor (BJT). Greek letter alpha "α" is the symbol used.
Amplifier	A circuit that increases the voltage, current, or power of a signal.
Amplitude	Magnitude or size of a signal voltage or current.
Analog	Information represented as continuously varying voltage or current rather than in discrete levels as opposed to digital data varying between two discrete levels.
Anode	The positive electrode or terminal of a device. The "P" material of a diode.
Astable	A circuit that cannot remain in one state. That is it will periodically switch between states or oscillate.
Attenuate	To reduce the amplitude of an action or signal. The opposite of amplification.

Glossário

Average value	A value of voltage or current where the area of the wave above the value equals the area of the wave below the value.
AWG	Abbreviation for Arbitrary Waveform Generator. Abbreviation for American Wire Gauge.
B	
Bandwidth	(BW), Width of the band of frequencies between the half power points.
Barrier potential	The natural difference of potential that exists across a forward biased pn junction.
Base	The region that lies between the emitter and collector of a bipolar junction transistor (BJT).
Base biasing	A method of biasing a BJT in which the bias voltage is supplied to the base by means of a resistor.
Beta (β)	The ratio of collector current to base current in a bipolar junction transistor (BJT).
Bias	A DC voltage applied to a device to control its operation.
Bipolar junction transistor	(BJT), A three terminal device in which emitter to collector current is controlled by base current.
Bode plot	A graph of gain versus frequency.
Branch current	The portion of total current flowing in one path of a parallel circuit.
Breakdown voltage	Voltage at which the breakdown of a dielectric or insulator occurs.
Bridge rectifier	A circuit using four diodes to provide full wave rectification. Converts an AC voltage to a pulsating DC voltage.
Buffer	An amplifier used to isolate a load from a source.
Bulk resistance	The natural resistance of a "P" type or "N" type semiconductor material.
Bypass capacitor	A capacitor used to provide an AC ground at some point in a circuit.

Glossário

C

CAD	Abbreviation for “computer aided design”
CAN	Controller Area Network, a robust serial communication bus standard popular in automotive and industrial applications.
Capacitance	The ability of a capacitor to store an electrical charge. The basic unit of capacitance is the Farad.
Capacitor	An electronic component having capacitive reactance.
Cascaded amplifier	An amplifier with two or more stages arranged in a series configuration.
Cascode amplifier	A high frequency amplifier made up of a common-source or common-emitter amplifier with a common-gate or common base amplifier in its drain/collector network.
Cathode	The negative terminal electrode of a device.
Center tapped rectifier	Circuit that make use of a center tapped transformer and two diodes to provide full wave rectification.
Center tapped transformer	A transformer with a connection at the electrical center of a winding.
Charge	Quantity of electrical energy.
Circuit	Interconnection of components to provide an electrical path between two or more components.
Clamp	A diode circuit used to change the DC level of a waveform without distorting the waveform.
Class A amplifier	A linear amplifier biased so the active device conducts through 360 degrees of the input waveform.
Class B amplifier	An amplifier with two active devices. The active components are biased so that each conducts for approximately 180 degrees of the input waveform cycle.
Class C amplifier	An amplifier in which the active device conducts for less than 180 degrees of the input waveform cycle.

Glossário

Clipper	A diode circuit used to eliminate part of a waveform above or below a limit.
Closed circuit	Circuit having a complete path for current flow.
Closed-loop gain	Gain of an amplifier when a feedback path is present.
Collector	The semiconductor region in a bipolar junction transistor through which a flow of charge carriers leaves the base region.
Collector characteristic curve	A graph of collector voltage over collector current for a given base current.
Common base amplifier	A BJT circuit in which the base connection is common to both input and output.
Common collector amplifier	A BJT circuit in which the collector connection is common to both input and output.
Common drain amplifier	A FET circuit in which the drain connection is common to both input and output.
Common emitter amplifier	A BJT circuit in which the emitter connection is common to both input and output.
Common gate amplifier	A FET circuit in which the gate connection is common to both input and output.
Common source amplifier	A FET circuit in which the source connection is common to both input and output.
Common-mode rejection ratio	(CMRR), The ratio of op-amp differential gain to common-mode gain. A measure of an op-amp's ability to reject common-mode signals such as noise.
Common-mode signals	Signals that appear simultaneously at two inputs of an operational amplifier (op-amp). Common mode signals are always equal in amplitude and phase.
Complimentary MOSFET logic	CMOS logic dominates the digital industry because the power requirements and component density are significantly better than other technologies.

Glossário

Comparator	An op-amp circuit that compares two inputs and provides a DC output indicating the polarity relationship between the inputs.
Complementary transistors	Two transistors, one NPN and one PNP having near identical characteristics. N-channel and P-channel FETs can also be complementary.
Constant current circuit	Circuit used to maintain constant current to a load having resistance that changes.
Conventional current flow	Concept of current produced by the movement of positive charges towards the negative terminal of a source.
Coulomb	Unit of electric charge. A negative coulomb charge consists of 6.24×10^{18} electrons.
Coupling	To electronically connect two circuits so that signal will pass from one to the other.
Current	Measured in amperes, it is the flow of electrons through a conductor. Also known as electron flow.
Current amplifier	Amplifier to increase signal current.
Current divider	Parallel network designed to divide the total current of a circuit.
Current feedback	Feedback configuration where a portion of the output current is fed back to the amplifier input.
Current mirror	Term used to describe the fact that DC current through the base circuit of a class B amplifier is approximately equal to the DC collector current.
Cutoff	Condition when an active device is biased such that output current is near zero or beyond zero.
D	
DAC	Abbreviation for “digital to analog converter.”
Darlington pair	An amplifier consisting of two bipolar junction transistors with their collectors connected together and the emitter of one connected to the base of the other. Circuit has an extremely high current gain and input impedance.

Glossário

DC	Abbreviation for “direct current”.
DC load line	A graph representing all possible combinations of voltage and current for a given load resistor in an amplifier.
DC offset	The change in input voltage required to produce a zero output voltage when no signal is applied to an amplifier.
DC power supply	Any source of DC power for electrical equipment.
Decade	A frequency factor of ten.
Decibel	(dB), A logarithmic representation of gain or loss.
Degenerative feedback	Also called negative feedback. A portion of the output of an amplifier is inverted and connected back to the input. This controls the gain of the amplifier and reduces distortion and noise.
Depletion layer or region	The area surrounding a PN junction that is depleted of carriers.
Depletion mode	In a FET, an operating mode where reverse gate-source voltage is used to deplete the channel of free carriers. This reduces the size of the channel and increases its resistance.
Depletion-mode MOSFET	A MOSFET designed to operate in either depletion mode or enhancement mode.
Device	A component or part.
Dielectric	Insulating material between two plates where an electrostatic field exists.
Dielectric constant	Property of a material that determines how much electrostatic energy can be stored per unit volume when unit voltage is applied.
Dielectric strength	The maximum voltage an insulating material can withstand without breaking down.
Differential amplifier	An amplifier in which the output is in proportion to the differences between voltages applied to its two inputs.
Differentiator	A circuit in which the output voltage is in proportion to the rate of change of the input voltage. A high pass RC circuit.

Glossário

Diffusion	Tendency of conduction band electrons to wander across a PN junction to combine with valence band holes.
Digital	Relating to devices or circuits that have outputs of only two discrete levels. Examples: 0 or 1, high or low, on or off, true or false etc.
Digitizing oscilloscope	An oscilloscope that uses a high-speed analog-to-digital converter (ADC) to measure signals and then displays them on a screen (CRT or LCD) using standard computer graphics techniques.
Diode	A two terminal device that conducts in only one direction.
Direct coupling	Where the output of one amplifier stage is connected directly to the input of a second amplifier or to a load. Also known as DC coupling because DC signals are not blocked.
Direct current (DC)	Current that flows in only one direction.
Donor atoms	Pentavalent atoms that give up electrons to the conduction band in an N type semiconductor material.
Doping	The process of adding impurity atoms to intrinsic (pure) silicon or germanium to improve the conductivity of the semiconductor material.
E	
Electric charge	Electric energy stored on the surface of a material. Also known as a static charge.
Electric field	A field or force that exists in the space between two different potentials or voltages. Also known as an electrostatic field.
Electromotive force	(emf), Force that causes the motion of electrons due to potential difference between two points. (voltage)
Electron	Smallest subatomic particle of negative charge that orbits the nucleus of an atom.
Electron flow	Electrical current produced by the movement of free electrons towards a positive terminal.
Electrostatic	Related to static electric charge.

Glossário

Emitter	The semiconductor region from which charge carriers are injected into the base of a bipolar junction transistor.
Emitter feedback	Coupling from the emitter output to the base input of a bipolar junction transistor.
Emitter follower	A common collector amplifier. Has a high current gain, high input impedance and low output impedance.
Engineering notation	A floating point system in which numbers are expressed as products consisting of a number greater than one multiplied by an appropriate power of ten that is some multiple of three.
Enhancement-mode MOSFET	A field effect transistor in which there are no charge carriers in the channel when the gate source voltage is zero.
Equivalent resistance	Total resistance of all the individual resistances in a circuit.
F	
Fall time	Time it takes the falling edge of a pulse to go from 90% of peak voltage to 10% of peak voltage.
Farad	The basic unit of capacitance.
Feedback	A portion of the output signal of an amplifier which is connected back to the input of the same amplifier.
Feedback amplifier	An amplifier with an external signal path from its output back to its input.
Field effect transistor	(FET), A voltage-controlled transistor in which the source to drain conduction is controlled by gate to source voltage.
Filter	Network consisting of capacitors, resistors and/or inductors used to pass certain frequencies and block others.
Flip Flop	A digital circuit that flips or toggles between two stable states (bistable). The Flip Flop inputs decide which of the two states its output will be.
Forward bias	A PN junction bias which allows current to flow through the junction. Forward bias decreases the resistance of the depletion layer.

Glossário

Free electrons	Electrons that are not in any orbit around a nucleus.
Frequency-domain analysis	A method of representing a waveform by plotting its amplitude against frequency.
Frequency response	Indication of how well a circuit responds to different frequencies applied to it.
Frequency response curve	A graph of amplitude over frequency indicating a circuit response to different frequencies.
Full wave rectifier	Rectifier that makes use of the full AC wave in both the positive and negative half cycles.
Function generator	Signal generator that can produce sine, square, triangle and sawtooth output waveforms.
Fundamental frequency	Lowest frequency in a complex waveform.
G	
Gain	Increase in voltage, current and/or power. Gain is expressed as a ratio of amplifier output value to the corresponding amplifier input value.
Gain bandwidth product	A device parameter that indicates the maximum possible product of gain and bandwidth. The gain bandwidth product of a device is equal to the unity gain frequency (funity) of the device.
GPIB	General-purpose instrument bus, also known as the IEEE-488 bus, widely used as an interface for connecting test instruments to computers and for providing programmable instrument control.
Ground	An intentional or accidental conducting path between an electrical system or circuit and the earth or some conducting body acting in place of the earth. A ground is often used as the common wiring point or reference in a circuit.

Glossário

H

Half power point

A frequency at which the power is 50% of maximum. This corresponds to 70.7% of maximum current or voltage.

H-parameters

(hybrid parameters), Transistor specifications that describe the component operating limits under specific circumstances.

Half wave rectifier

A diode rectifier that converts AC to pulsating DC by eliminating either the negative or the positive alternation of each input AC cycle.

Harmonic

Sine wave that is smaller in amplitude and some multiple of a fundamental frequency. Example: 880 Hz. is the second harmonic of 440 Hz., 880 Hz. is the third harmonic of 220 Hz.

Harmonics

A frequency component of a signal that is an integral multiple of the fundamental of that signal.

Hole

A gap left in the covalent bond when a valence electron gains sufficient energy to jump to the conduction band.

I

I2C

Inter integrated circuit bus, a short-distance serial communication bus standard consisting of two signals (clock and data), popular for talking between several integrated circuits on the same printed circuit board.

IC

Abbreviation for "integrated circuit"

IC voltage regulator

Three terminal device used to hold the output voltage of a power supply constant over a wide range of load variations.

IGFET

Insulated gate field effect transistor. Another name for a "MOSFET."

Impedance

(Z) Measured in ohms it is the total opposition to the flow of current offered by a circuit. Impedance consists of the vector sum of resistance and reactance.

Interleave

A technique used in digitizing oscilloscopes whereby ADCs of different analog channels are used together, normally resulting in higher sample rate or more memory depth when you are using fewer channels.

Glossário

Internal resistance	Every source has some resistance in series with the output current. When current is drawn from the source some power is lost due to the voltage drop across the internal resistance. Usually called output impedance or output resistance.
Intrinsic material	A semiconductor material with electrical properties essentially characteristic of ideal pure crystal. Essentially silicon or germanium crystal with no measurable impurities.
Inverting amplifier	An amplifier that has a 180° phase shift from input to output.
Inverting amplifier	An amplifier that has a 180° phase shift from input to output.
Inverting input	In an operational amplifier (op amp) the input that is marked with a minus sign. A signal applied at the inverting input will be given 180° phase shift between input and output.
Ion	An atom with fewer electrons in orbit than the number of protons in the nucleus is a positive ion. An atom with a greater number of electrons in orbit than the number of protons in the nucleus is a negative ion.
J	
Junction	Contact or connection between two or more wires or cables. The area where the p-type material and n-type material meet in a semiconductor.
Junction diode	Diode. A semiconductor diode in which the rectifying characteristics occur at a junction between the n-type and p-type semiconductor materials.
K	
Kilo	Metric prefix for 1000.
Kirchhoff's current law	The sum of the currents flowing into a point in a circuit is equal to the sum of the currents flowing out of that same point.
Kirchhoff's voltage law	The algebraic sum of the voltage drops in a closed path circuit is equal to the algebraic sum of the source voltages applied.

Glossário

Knee voltage

The voltage at which a curve joins two relatively straight portions of a characteristic curve. For a PN junction diode, the point in the forward operating region of the characteristic curve where conduction starts to increase rapidly. For a zener diode, the term is often used in reference to the zener voltage rating.

L

L-C tank circuit

A circuit consisting of inductance and capacitance, capable of storing electricity over a band of frequencies continuously distributed about a single frequency at which the circuit is said to be resonant or tuned.

Light-emitting diode

(LED), A semiconductor diode that converts electric energy into electromagnetic radiation at a visible and near infrared frequencies when its pn junction is forward biased.

Limiter

Circuit or device that prevents some portion of its input from reaching the output.

Local interconnect network

(LIN), A short-distance serial communication standard that is often found in systems also containing the CAN bus. LIN is slower and less complex than the CAN bus.

Linear

Relationship between input and output in which the output varies in direct proportion to the input.

Linear scale

A scale in which the divisions are uniformly spaced.

Line regulation

The ability of a voltage regulator to maintain a constant voltage when the regulator input voltage varies.

Load

A source drives a load. Whatever component or piece of equipment is connected to a source and draws current from a source is a load on that source.

Load current

Current drawn from a source by a load.

Load impedance

Vector sum of reactance and resistance in a load.

Loading effect

Large load impedance will draw a small load current and so loading of the source is small. (light load). A small load impedance will draw a large load current from the source. (heavy load).

Glossário

Load regulation

The ability of a voltage regulator to maintain a constant output voltage under varying load currents.

Load resistance

Resistance of a load.

M

Majority carriers

The conduction band electrons in an n-type material and the valence band holes in a p-type material. Produced by pentavalent impurities in n-type material and trivalent impurities in p-type material.

Metal oxide field effect transistor

(MOSFET), A field effect transistor in which the insulating layer between the gate electrode and the channel is a metal oxide layer.

Mid-band gain

Gain of an amplifier operating within its bandwidth.

Mid-point bias

An amplifier biased at the center of its DC load line.

Mil

One thousandth of an inch (0.001 in.)

Miller's theorem

A theorem that allows you to represent a feedback capacitor as equivalent input and output shunt capacitors.

Minority carriers

The conduction band holes in n-type material and valence band electrons in p-type material. Most minority carriers are produced by temperature rather than by doping with impurities.

Mixed-signal oscilloscopes

(MSOs), Digitizing oscilloscopes that have a larger number of channels than usual for looking at both analog and digital signals. MSOs typically have two or four analog channels and at least 8 bits of vertical resolution. There are usually 16 digital channels but they typically have only 1 bit of vertical resolution.

Monostable

A circuit that has one stable state. When perturbed, the circuit will return to the stable state after some fixed amount of time.

Multivibrator

A circuit used to implement a simple two-state system, which may be astable, monostable, or bistable.

Glossário

N

N-type semiconductor

A semiconductor compound formed by doping an intrinsic semiconductor with a pentavalent element. An n-type material contains an excess of conduction band electrons.

Negative

Terminal that has an excess of electrons.

Negative charge

A charge that has more electrons than protons.

Negative feedback

A feedback signal 180° out of phase with an amplifier input signal. Used to increase amplifier stability, bandwidth and input impedance. Also reduces distortion.

Negative ion

An atom having a greater number of electrons in orbit than there are protons in the nucleus.

Negative resistance

A resistance such that when the current through it increases the voltage drop across the resistance decreases.

Negative temperature coefficient

A term used to describe a component whose resistance or capacitance decreases when temperature increases.

Node

Junction or branch point in a circuit.

Noise

Unwanted electromagnetic radiation within an electrical or mechanical system.

Non-inverting input

The terminal on an operational amplifier that is identified by a plus sign.

Non-linear scale

A scale in which the divisions are not equally spaced, logarithmic.

Norton's theorem

Any network of voltage sources and resistors can be replaced by a single current source in parallel with a single resistor.

NPN transistor

A bipolar junction transistor in which a p-type base element is sandwiched between an n-type emitter and an n-type collector.

Glossário

O

One Shot

Monostable circuit that produces one pulse when triggered.

Open-loop gain

The open-loop gain of an operational amplifier is the gain obtained when no feedback is used in the circuit. Open loop gain is usually exceedingly high; in fact, an ideal operational amplifier has infinite open-loop gain. Typically, an op-amp may have an open-loop gain of around 100,000. Normally, feedback is applied around the op-amp so that the gain of the overall circuit is defined and kept to a figure which is more usable. However, the very high gain of the op-amp enables considerable levels of feedback to be applied to achieve required performance. The open-loop gain of an operational amplifier falls very rapidly with increasing frequency. Along with slew rate, this is one of the reasons why operational amplifiers have limited bandwidth.

P

Passive component

Component that does not amplify a signal. Resistors, capacitors and inductors are examples.

Peak to peak

Difference between the maximum positive and maximum negative values of an AC waveform.

Pentavalent element

Element whose atoms have five valence electrons. Used in doping intrinsic silicon or germanium to produce n-type semiconductor material. Most commonly used pentavalent materials are arsenic and phosphorus.

Percent of regulation

The change in output voltage that occurs between no-load and full-load in a DC voltage source. Dividing this change by the full-load value and multiplying the result by 100 gives percent regulation.

Percent of ripple

The ratio of the effective rms value of ripple voltage to the average value of the total voltage. Expressed as a percentage.

Pinch-off region

A region on the characteristic curve of a FET in which the gate bias causes the depletion region to extend completely across the channel.

Glossário

PNP transistor	A bipolar junction transistor with an n-type base and p-type emitter and collector.
Positive feedback	A feedback signal that is in phase with an amplifier input signal. Positive feedback is necessary for oscillation to occur.
Potential difference	Voltage difference between two points which will cause current to flow in a closed circuit.
Potentiometer	A variable resistor with three terminals. Mechanical turning of a shaft can be used to produce variable resistance and potential. Example: A volume control is usually a potentiometer.
Power supply rejection ratio	(PSRR), A measure of an op-amps ability to maintain a constant output when the supply voltage varies.
Protoboard	Board with provision for attaching components without solder. Also called a breadboard. Primarily used for constructing experimental circuits.
Q	
Quiescent point	(Q point), A point on the DC load line of a given amplifier that represents the quiescent (no signal) value of output voltage and current for the circuit.
R	
RC time constant	Product of resistance and capacitance in seconds.
Recombination	Process by which a conduction band electron gives up energy (in the form of heat or light) and falls into a valence band hole.
Rectification	Process that converts alternating current to direct current.
Rectifier	Diode circuit that converts alternating current into pulsating direct current.
Regenerative feedback	Positive feedback. Feedback from the output of an amplifier to the input such that the feedback signal is in phase with the input signal. Used to produce oscillation.

Glossário

Regulated power supply	Power supply that maintains a constant output voltage under changing load conditions.
Regulator	Device or circuit that maintains a desired output under changing conditions.
Resistance	Symbolized "R" and measured in ohms. Opposition to current flow and dissipation of energy in the form of heat.
Resistor	Component made of material that opposes flow of current and therefore has some value of resistance.
Reverse bias	Bias on a PN junction that allows only leakage current (minority carriers) to flow. Positive polarity on the n-type material and negative polarity to the p-type material.
Reverse breakdown voltage	Amount of reverse bias that will cause a PN junction to break down and conduct in the reverse direction.
Reverse current	Current through a diode when reverse biased. An extremely small current also referred to as leakage.
Reverse saturation current	Reverse current through a diode caused by thermal activity. This current is not affected by the amount of reverse bias on the component but does vary with temperature.
R-2R ladder	Network or circuit composed of a sequence of L networks connected in tandem. Circuit used in digital to analog converters.
S	
Saturation	Condition in which a further increase in one variable produces no further increase in the resultant effect. In a bipolar junction transistor, the condition when the emitter to collector voltage is less than the emitter to base voltage. This condition puts forward bias on the base to collector junction.
Schematic diagram	Illustration of an electrical or electronic circuit with the components represented by their symbols.
Scientific notation	Numbers entered as a number from one to ten multiplied by a power of ten. Example: $8765 = 8.765 \times 10^3$.

Glossário

SDRAM	Synchronous dynamic random-access memory, the most popular form of digital memory today. It differs from previous-generation DRAM in that all signal timing is relative to one clock.
Self-biasing	Gate bias for a field effect transistor in which source current through a resistor produces the voltage for gate to source bias.
Semiconductor	An element which is neither a good conductor or a good insulator, but rather lies somewhere between the two. Characterized by a valence shell containing four electrons. Silicon, germanium and carbon are the semiconductors most frequently used in electronics.
Series circuit	Circuit in which the components are connected end to end so that current has only one path to follow through the circuit.
Signal to noise ratio (SNR)	Ratio of the magnitude of the signal to the magnitude of noise usually expressed in decibels.
Silicon	(Si), Nonmetallic element (atomic number 14) used in pure form as a semiconductor.
Silicon dioxide	Glass like material used as the gate insulating material in a MOSFET.
Silicon transistor	A bipolar junction transistor using silicon as the semi conducting material.
Solid state	Pertaining to circuits where signals pass through solid semiconductor material such as transistors and diodes as opposed to vacuum tubes where signals pass through a vacuum.
Source follower	FET amplifier in which signal is applied between gate and drain with output taken between source and drain. Also called "common drain."
Source impedance	Impedance through which output current is taken from a source.
Spectrum analyzer	Instrument used to display the frequency domain of a waveform plotting amplitude against frequency.
SPI	Serial Peripheral Interface, a very simple short-distance serial communication bus standard consisting of either two (clock and data) or three (clock, data and strobe) signals, popular for reading data from microcontroller peripherals such as ADCs.

Glossário

Summing amplifier

An op-amp circuit whose output is proportional to the sum of its instantaneous voltages.

Superposition theorem

Theorem designed to simplify networks containing two or more sources. It states that in a network containing more than one source, the current at any one point is equal to the algebraic sum of the currents produced by each source acting separately.

T

Thevenin's theorem

Theorem that replaces any complex network with a single voltage source in series with a single resistance.

Threshold voltage

For an enhancement MOSFET, the minimum gate source voltage required for conduction of source drain current.

Transconductance

Also called mutual conductance. Ratio of a change in output current to the change in input voltage that caused it.

Transistor

Term derived from "transfer resistor." Semiconductor device that can be used as an amplifier or as an electronic switch.

Trivalent element

One having three valence electrons. Used as an impurity in semiconductor material to produce p-type material. Most commonly used trivalent elements are: Aluminum, Gallium and Boron.

U

Unity gain frequency

Frequency of operation for a device where the gain of the component drops to unity.

V

Valence shell

The outermost electron shell for a given atom. The number of electrons in this shell determines the conductivity of the atom.

Varactor diode

PN junction diode with a high junction capacitance when reverse biased. Most often used as a voltage-controlled capacitor. The varactor is also called: varicap, tuning diode and epicap.

Variable capacitor

Capacitor whose capacitance can be change by varying the effective area of the plates or the distance between the plates.

Glossário

Variable resistor	Resistor whose resistance can be changed by turning a shaft. See also “potentiometer and rheostat.”
Virtual ground	Point in a circuit that is always at approximately ground potential. Often a ground for voltage, but not for current. The summing junction in an op-amp circuit.
Volt	Unit of potential difference or electromotive force. One volt is the potential difference needed to produce one ampere of current through a resistance of one ohm.
Voltage	(V), Term used to designate electrical pressure or force that causes current to flow.
Voltage amplifier	Amplifier designed to build up signal voltage. By design amplifiers can have a large voltage gain or a large current gain or a large power gain. Voltage amplifiers are designed to maximize voltage gain often at the expense of current gain or power gain.
Voltage divider	Fixed or variable series resistor network connected across a voltage to obtain a desired fraction of that voltage.
Voltage divider biasing	Biasing method used with amplifiers in which two series resistors connected across a source. The junction of the two biasing resistors provides correct bias voltage for the amplifier.
Voltage drop	Voltage or difference in potential developed across a component due to current flow.
Voltage feedback	Feedback configuration where a portion of the output voltage is fed back to the input of an amplifier.
Voltage follower	Operational amplifier circuit characterized by a high input impedance, low output impedance and unity voltage gain. Used as a buffer between a source and a low impedance load.
Voltage gain	Also called voltage amplification. Ratio of amplifier output voltage to input voltage usually expressed in decibels.
Voltage multiplier	Rectifier circuit using diodes and capacitors to produce a DC output voltage that is some multiple of the peak value of AC input voltage. Cost effective way of producing higher DC voltages. Voltage doublers and voltage triplers are examples.

Glossário

Voltage regulator

Device or circuit that maintains constant output voltage (within certain limits) in spite of changing line voltage and/or load current.

Voltage source

Circuit or device that supplies voltage to a load.

Z**Zener diode**

Semiconductor diode in which reverse breakdown voltage current causes the diode to develop a constant voltage. Used as a clamp for voltage regulation.

Inglês Corporativo

Explore estes recursos para expandir seu vocabulário corporativo:

Inglês Corporativo 17 set, 2022



**Inglês Corporativo Técnico:
vocabulário útil para sua profissão**

Inglês Corporativo 5 out, 2023





Rotina de trabalho em inglês

Fluência Descomplicada

Isso que você acabou de ler foi nosso **conteúdo gratuito**. Espero que tenha sido útil no seu aprendizado.

Se você busca **resultados na evolução do seu inglês**, conheça o curso Fluência Descomplicada, aqui da Nação Fluente.

Ele é focado na prática; por isso, disponibiliza ao aluno cinco encontros semanais para treinar conversação em inglês, com duração de 1 hora e meia cada, totalizando **7 horas e meia de conversação por semana**.

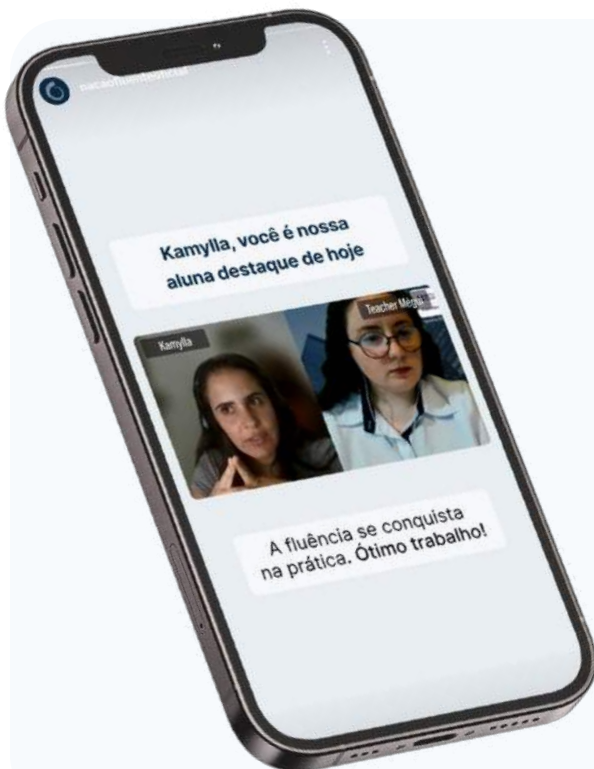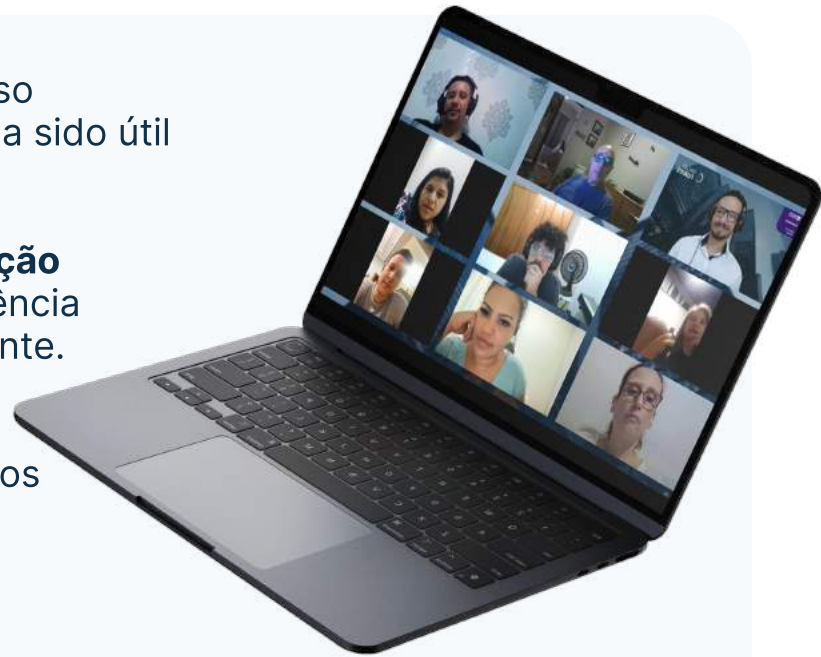

Se o aluno precisa tirar dúvidas, praticar sobre um tema específico e deseja avaliar sua evolução, ele também pode contar com as **aulas individuais exclusivas** entre ele e o professor, que ocorrem uma vez por semana com duração de 50 minutos.

Para **traçar estratégias** para aprender inglês de maneira eficaz, tirando o máximo proveito disso tudo, o aluno também recebe acesso aos encontros de coaching voltado para idiomas.

Por fim, há a área do aluno, com vídeo aulas e material de apoio em uma plataforma de fácil acesso.

Conheça o Fluência Descomplicada

Compartilhe

Ajude a democratizar o ensino do inglês no Brasil

Caro leitor,

Você chegou ao final de mais uma etapa importante em sua jornada de aprendizado de inglês.

Mas lembre-se, o conhecimento é ainda mais poderoso quando compartilhado.

Nossa missão vai além do ensino; é também sobre criar uma comunidade onde o inglês é acessível a todos, independentemente de onde estão ou de suas condições financeiras.

Ao compartilhar este material, você se torna parte fundamental dessa missão.

Como você pode ajudar?



Baixe este material

Faça o download deste material através do link fornecido para obter uma cópia e explorar seu conteúdo.



Compartilhe com alguém

Pode ser alguém próximo a você - amigo, colega, familiar ou alguém em sua rede social - que se beneficiaria deste aprendizado.



Espalhe a palavra

Converse sobre como este material ajudou você e encoraje outros a se juntarem a nós nesta jornada de aprendizado.

Cada pessoa que você ajuda a aprender inglês é uma semente plantada para um futuro onde barreiras linguísticas são diminuídas e oportunidades são ampliadas.

Juntos, podemos fazer uma grande diferença.

Vamos juntos nessa missão?



Vânia Paula de Freitas

Aula individual | Conversação | Inglês Corporativo Descomplicado